OTA firmware update for devices already in a Bluetooth mesh network

Application note

| Date: 4.10.2019 | Rev. 7 |
|-----------------|--------|
|-----------------|--------|

All of the contents are protected from copying under the provisions of copyright laws. Any unauthorized copying, alteration, distribution, transmission, performance, display or other use of this material is prohibited.

¹Silvair grants the Partner a non-exclusive, worldwide, royalty-free, non-transferable license to use, reproduce or modify the contents: (i) solely to make Partner's versions of the Application Note, (ii) for the term and to the extent required by the Branded Commissioning Service Agreement signed by Partner and Silvair.

LEGAL NOTICE DISCLAIMER

This document and the contents of all materials available from this document (the "Content") are subject to copyright (including patent protection) by SILVAIR, unless otherwise indicated. Copyright is not claimed as to any part of the intellectual property owned by Bluetooth SIG, Inc. Product names and markings noted herein may be trademarks of their respective owners. Accordingly, the Content may not be republished in any way without the prior written consent of SILVAIR. In doing so, you may not remove or alter, or cause to be removed or altered, any copyright, trademark, trade name, service mark, or any other proprietary notice or legend appearing on any of the Content. Modification or use of the Content except as expressly provided herein violates SILVAIR's intellectual property rights. Neither title nor intellectual property rights are transferred to you by access to this document.

The information provided in this document is provided "AS-IS" and SILVAIR specifically disclaims any and all express, implied or statutory warranties, including the implied warranties of fitness for a particular purpose, and of merchantability and against infringement. No person is authorized to make any warranty or representation on behalf of SILVAIR concerning the performance of the described services or information. The user of the document assumes all responsibility and liability for proper and safe handling of the goods and services. Further, the user indemnifies SILVAIR from all claims arising from the handling or use of the goods and services. It is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge and any other technical or legal concerns. Users handling electrostatic discharge installation must have appropriate electronics training and observe good standards of engineering practice. Except as expressly indicated in writing, SILVAIR services are not designed for use in medical, life-saving, or life-sustaining applications or for any other application in which the failure of the SILVAIR service could result in personal injury or death. The information contained in this document may not be used contrary to applicable law or any purpose other than specified in the document i.e. for a lighting control solution.

Unless otherwise specified in the writing, to the maximum extent permitted by applicable law. SILVAIR SHALL NOT BE RESPONSIBLE OR LIABLE TO ANYBODY FOR ANY DIRECT or INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUES, LOSS OF PROFITS OR LOSS OR INACCURACY OF DATA, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR INCURRED IN USING THIS DOCUMENT OR SILVAIR'S SERVICES AND/OR PRODUCTS. SILVAIR'S CUMULATIVE LIABILITY FOR ANY AND ALL DAMAGES IS LIMITED TO THE AMOUNTS PAID TO SILVAIR BY THE USER IN THE LAST 12 (TWELVE) MONTHS FOR THE PARTICULAR PRODUCTS AND/OR SERVICES WITH RESPECT TO WHICH A CLAIM IS MADE. SILVAIR HAS AGREED WITH THE USER THAT THESE LIMITATIONS WILL SURVIVE AND APPLY EVEN IF ANY LIMITED REMEDY SPECIFIED IN THIS AGREEMENT IS FOUND TO HAVE FAILED OF ITS ESSENTIAL PURPOSE.

The parameters provided in this document may vary over time. All operating parameters, including typical parameters, must be validated by each customer's technical experts.

Except as expressly indicated in writing, no license, express or implied, to any intellectual property rights is granted by this document or by any conduct of SILVAIR.

The document and information provided in this document is proprietary to SILVAIR, and unless otherwise indicated in writing, SILVAIR reserves the right to make any changes to the information in this document or to any products and services at any time without notice.

The document as well as the rights and obligations of SILVAIR and of the user of the documentation and/or SILVAIR'S services hereunder shall be governed by Polish regulations. The user of the document and SILVAIR agree to submit to the exclusive jurisdiction of, and venue in, the courts of Krakow, in any dispute arising out of or relating to this agreement. The application of the "United Nations Convention on Contracts for the International Sale of Goods" is hereby excluded. All required or permitted notices to Silvair under this document will be made in writing, make reference to this document, and be delivered by hand, or dispatched by prepaid air courier or by registered or certified airmail, postage prepaid, addressed as follows:

SILVAIR Sp. z o.o. ul. Jasnogórska 44 31-358 Kraków Poland

Overview

OTA firmware update for devices in the Bluetooth mesh

OTA (over-the-air) firmware update allows you to upgrade the Silvair firmware or external firmware on your lighting devices using the Commissioning mobile app. The update of Silvair firmware is automatic (the new firmware is stored and downloaded from the cloud). To update external firmware, user must have a firmware file (in a zip format) and upload it to the Commissioning mobile app.

NOTE:

Light blinking / light turns off.

When a device is selected for a firmware update and it is being updated via the Silvair app, it always blinks and the light turns off after firmware update starts. This is expected behavior and may last for a few seconds for each of the updated devices.

IMPORTANT NOTICE:

While doing the OTA (over-the-air) update make sure the devices are **powered on.** Powering off the device during the update may render the device unusable.

The main features of the OTA update in the Commissioning app are:

- ability to update the firmware of devices that have already been added to the mesh network (provisioned)
- updating and commissioning activities can be done using a single app
- the update is simultaneous on up to 4 devices (e.g. user selects 20 devices to update, first 4 devices are queued and updated with new firmware, then the app selects the remaining devices and updates them in packets of four)
- ability to update devices from the level of a single, or multiple zones (user first chooses the zone(s) where he'd like to start the update and then selects the devices to update)
- updating devices with the mobile app is possible only for devices with Silvair firmware version 2.10 and higher

NOTE:

With the Silvair DFU app you can upgrade devices which are not part of the mesh: devices which have not been added yet or have been removed from the mesh network. Updating firmware with the DFU app is available only for devices running firmware version 2.8.0 and above.

NOTE:

Devices updated with **new** firmware features must be recommissioned (removed and added to the project again) in order to activate those features.

Requirements to use the automatic OTA in the mobile app:

- an account in the commissioning web app
- the commissioning mobile app for iOS
- access to the project with devices to be updated
- a zip file with upgraded firmware which allows for the update of devices with external (not Silvair) firmware

NOTE:

Once the device's firmware is updated, it is not possible to revert it to a previous version!

Click <u>here</u> to see the update flow in the app.

OTA firmware update in the mobile app

NOTE:

Light blinking / light turns off.

Floor 1

When a device is selected for a firmware update and it is being updated via the Silvair app, it always blinks and the light turns off after firmware update starts. This is expected behavior and may last for a few seconds for each of the updated devices.

Step 1 Step 2 Select a project and an area where you button on the area plan and Press the would like to do the devices' update. choose "Update devices". This allows to select devices added to the **zones** from that area. 15:48 15:48 Floor 1 Floor 1 Edit Remove Update devices Mesh quality

Floor 1

Step 3

 Select firmware to be updated. The screen will show only the devices which have higher firmware versions available.


Update methods:


- **Silvair firmware** for devices with Silvair firmware
- External firmware for devices with external firmware (they undergo update from file)
- You can select updates for devices with Silvair and external firmware at the same time.
- In case you update devices with external firmware, go to step 4.
- Press **NEXT** and select zones where you will be doing the update (step 5).
- The devices on the below screen are all devices from the selected area.
- The number next to a device name is a total number of devices with the same firmware from the selected area.

Step 4

NOTE: This step is an addition to Step 3 in case you update devices with external firmware.

- If you select **external firmware update**, you must choose the external firmware file from the dropdown under each device group. It is not possible to update a device with external firmware without a file.
- Click <u>here</u> to check how to upload external firmware file to your iOS device.
- Press NEXT and select zones where you will be doing the update (step 5).

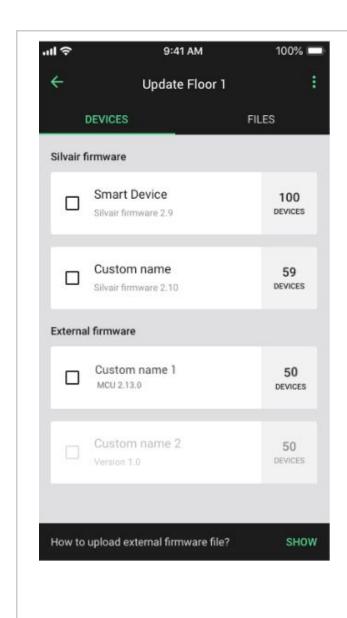

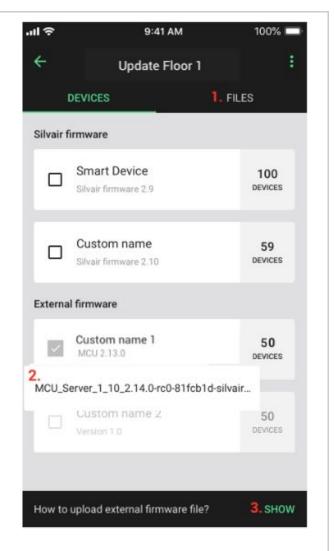

- 1. Tap to see, or remove the uploaded firmware
- 2. This is the uploaded firmware file which will be used to update this device.
- 3. You can also check how to upload external firmware file by tapping SHOW button on the bottom of the screen.

Step 5

- Select the zones where you would like to start the update. You can select one or more zones.
- When choosing zones make sure not to select the zones that are out of the range of your iOS device. We recommend to choose zones that are located at maximum 30 metres away from your position.
- You can select zones manually by tapping on each zone's icon.

Step 6


- Double check the chosen devices to update. At this moment you can still deselect some zones or devices.
- Make sure that you physically are in a close distance from the selected devices (the closer to the luminaire, the better).
- Confirm by pressing UPDATE (XX) DEVICES button which shows the total number of devices to update.
- The update should start immediately.

- You can also quickly select all zones by pressing the button and choosing Select all zones.
- Press NEXT button.



NOTE: Remember to keep the phone within 10-30 meters of distance from the updated devices and do not power them off during the update.

NOTE: Make sure that there is one person updating devices in the zone in a range of approx. 30 metres. If e.g. 2 commissioners are updating devices in a close distance (less than 30m), at the same time, their phones can connect to the same Proxy device, which may leads to errors.

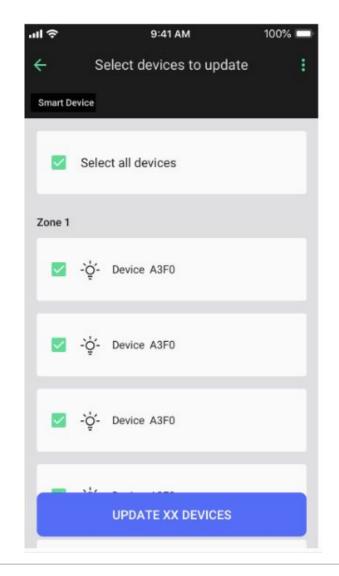

Step 7 ·메 후 × Smart Device Zone 1 25%

Step 8

- Devices are updated simultaneously in groups of 4 devices.
- If you are connected to a "Proxy" device and select it for an update, it will always be updated as the last one in a queue.
- Devices with external firmware are updated after all Silvair firmware devices finished updating.
- After finishing the update, the app will show "All devices have been updated" message.

9:41 AM

Update queue

Device A3F0

Device A3F0

Device A3F0

Device A3F0

Device A3F0

Completed - 0

NOTE: Do not interrupt the update while the selected devices are being updated.


100% -

X

X

×


- If there is an error, the app will show the "Update error" message under device name.
- In this case, press the "**Retry all**" button to run the update again.

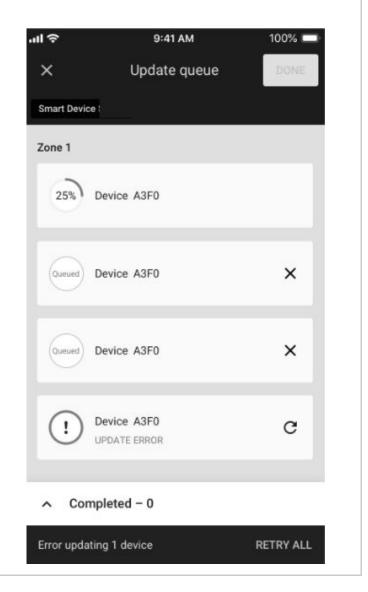

Update from file (devices with external firmware)

Step 1


- Import the file with the new version of the firmware into your iOS device. You can do it e.g. by AirDrop, or send via email
- After importing the zip firmware file, copy it to the mobile app.
- The app will show "Uploading file" message on the screen.

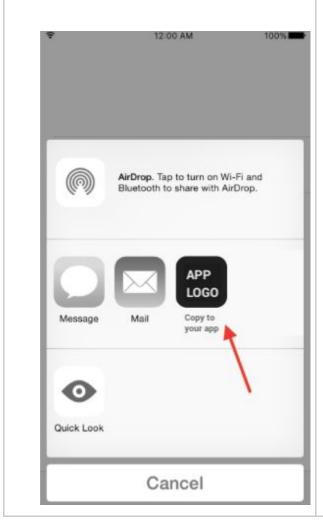

Step 2

- The firmware file is uploaded in the app.
- Select the firmware file from the dropdown under a device type you want to update.

NOTE: You can remove the unwanted firmware file. To do it, open the FILES tab, click on a 3-dot menu and press "**Remove**".

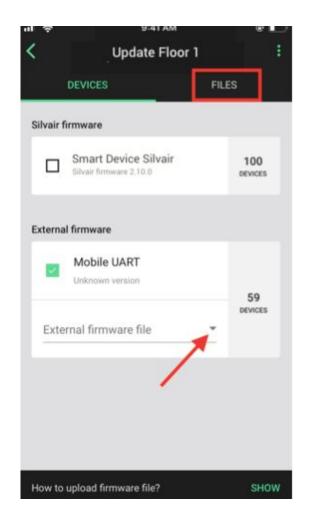

Step 3


- Select the devices to update with new firmware.
- You can select all devices or choose individual ones manually.
- Press the button at the bottom of the screen to start updating.


Step 4

- The update should complete automatically on all selected devices.
- After updating, you should see the message confirming the successful update.

NOTE: In the case of an update error, press the "**Retry all**" button at the bottom of the screen to restart the firmware update process.

• You can now exit the update view.

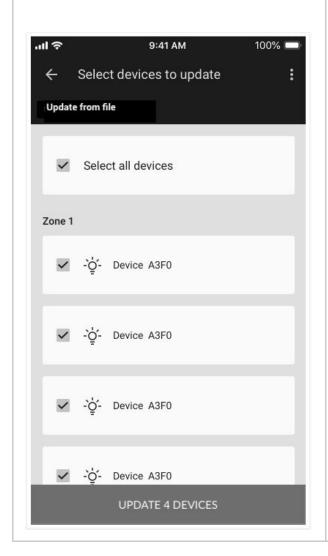

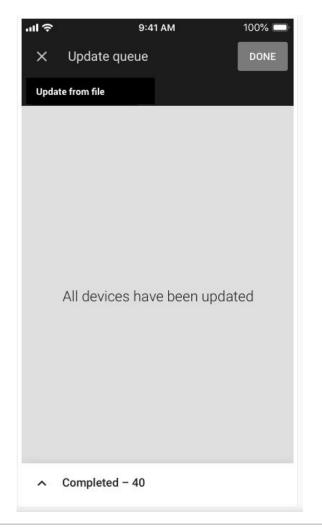

Troubleshooting

Errors may occur during a devices' firmware update (Silvair firmware, and external firmware). Some common errors and their explanations are provided below.

IMPORTANT NOTICE:

While doing the OTA (over-the-air) update make sure the devices are **powered on.** Powering off the device during the update may render the device unusable.

